



# COURIER™ 3000

Shipping Scales

**TECHNICAL  
ADVANTAGES**

Authorised OHAUS Australia Dealer  
[www.techadv.com.au](http://www.techadv.com.au)  
[sales@techadv.com.au](mailto:sales@techadv.com.au)



## *User-Friendly Basic Low-Profile Scales for General Shipping and Veterinary Applications*

The Courier 3000 Series shipping scales' intuitive, user-friendly interfaces, bright displays, and low-profile steel construction ensure durability and reliability from offices to warehouses to even veterinary offices (the Courier 3000 is effective for weighing small animals). Versatile and effective.

### *Unique Features:*


- Ideal for general shipping jobs or veterinary applications. Low-profile design with 1.5 mm thick painted steel platform to last rigorous daily use. Coiled cable ensures flexible display mounting.
- The Courier 3000's Display Hold mode (for use with large boxes and packages) retains weight on the large 28 mm high backlight display, until cleared.
- AC adapter power included, and disposable battery power (not included) for portable use.

# COURIER™ 3000 Shipping Scales

## Specifications

| Model                           | i-C31M35R  | i-C31M75R       | i-C31M200R      | i-C31M75L           | i-C31M200L      |
|---------------------------------|--|-----------------|-----------------|---------------------|-----------------|
| Capacity × Default Readability  | 35 kg x 0.02 kg  | 75 kg x 0.05 kg | 200 kg x 0.1 kg | 75 kg x 0.05 kg     | 200 kg x 0.1 kg |
| Maximum Displayed Resolution    | 1:1,750  | 1:1,500         | 1:2,000         | 1:1,500             | 1:2,000         |
| Weighing Units                  | kg   |                 |                 |                     |                 |
| Application Mode                | Weighing, Display Hold   |                 |                 |                     |                 |
| Display                         | 28 mm digit height, 4-digit, 7-segment LCD with white backlight  |                 |                 |                     |                 |
| Keyboard                        | 2 mechanical function keys   |                 |                 |                     |                 |
| Construction                    | ABS Plastic Indicator Housing<br>Painted steel base - R models with raised, embossed tread, L models with smooth platform  |                 |                 |                     |                 |
| Cable Length                    | 2 m (full extension)   |                 |                 |                     |                 |
| Stabilization Time              | 1 second   |                 |                 |                     |                 |
| Power                           | Dry cell battery: 3 x AA (LR6) Batteries (not included) or<br>AC Power adapter (power output: 5.0 VDC 1.0 A): 100-240VAC ~ 0.5A 50/60Hz<br>Battery life: 100 hours continuous use with backlight off |                 |                 |                     |                 |
| Operating Temperature Range     | -10 °C to 40 °C  |                 |                 |                     |                 |
| Safe Overload Capacity          | 150% of capacity   |                 |                 |                     |                 |
| Platform Dimensions (L x W x H) | 329 x 319 x 43.5 mm  |                 |                 | 520 x 400 x 52.9 mm |                 |
| Net Weight                      | 2.7 kg   |                 |                 | 8 kg                |                 |
| Shipping Weight                 | 3.4 kg   |                 |                 | 9 kg                |                 |
| Shipping Dimensions             | 395 x 385 x 155 mm   |                 |                 | 600 x 485 x 100 mm  |                 |

## Outline Dimensions

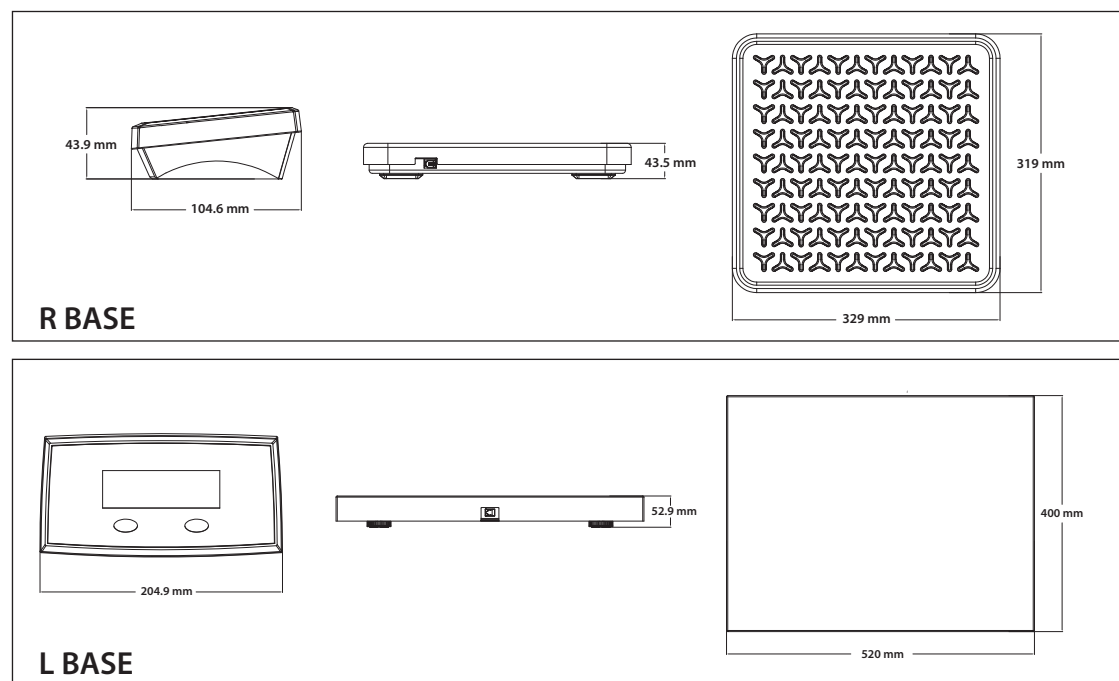

## Compliance

- **Product Safety:** IEC/EN 61010-1; UL certified power supply
- **Electromagnetic Compatibility:** IEC/EN 61326-1 Class B, basic environments; FCC Part 15 Class A; Canada ICES-003 Class A
- **Compliance Marks:** CE; RCM
- **Other:** WEEE, RoHS

## Accessories

Coiled extension cable 9m i-C52 i-C31 ..... 30809920

### OHAUS Asia/Pacific Headquarters

7F, Block 33, 680 Guiping Road  
Shanghai 200233  
China

e-mail: [APmarketing@ohaus.com](mailto:APmarketing@ohaus.com)  
Tel: +86 21 64855408

With offices throughout  
Europe, Asia, and  
Latin America

\* ISO 9001:2008

Registered Quality  
Management System

