



# Valor<sup>®</sup> 4000

Compact Bench Scales

## TECHNICAL ADVANTAGES

Authorised OHAUS Australia Dealer  
[www.techadv.com.au](http://www.techadv.com.au)  
[sales@techadv.com.au](mailto:sales@techadv.com.au)



V41PW



V41XW

### ***Legal for trade food scale that enhances safety, efficiency, and productivity even in harsh environments!***

The OHAUS Valor 4000 water resistant food scale raises the bar and sets a new industry standard with the winning combination of touchless operations, speed, and durability. Available in both stainless steel and plastic housing designs, Valor 4000 offers large LED front and rear displays, food safety and legal for trade approvals and puncture resistant keypads, making it the premiere scale for use in dry or washdown environments.

#### ***Standard Features Include:***

- **Approvals Ensure Operation in the Most Demanding Environments** — With Legal for Trade certifications and food-safe washdown design that's NSF Certified, USDA-AMS Accepted and supports HACCP Certified systems, Valor 4000 meets the needs of the most demanding commercial applications in dry or wet environments.
- **Knife Proof Keypad Prevents Damage from Sharp Objects** — Valor 4000 has a polycarbonate keypad that can endure contact with knives or sharp instruments used daily in demanding food preparation, processing and portioning applications.
- **The Flow-Thru Design Protects Valor<sup>®</sup> 4000 in Harsh Environments** — Safe to use in the weighing of liquids and in wet environments, Valor 4000's IPX8 flow-thru design ensures the scale remains protected from damage from liquids.
- **Fast Speed, Practical Touchless Sensors, and Multiple Weighing Modes Enhance Productivity** — Touchless sensors combined with a half second stabilization time increase the productivity of weighing operations without sacrificing accuracy. Additional checkweighing and percent weighing modes increase the functionality of this efficient scale.

# Valor<sup>®</sup> 4000 *Compact Bench Scales*

## Approvals Ensure Operation in the Most Demanding Environments

The Valor 4000 provides precise measurements in any environment in which approvals and certifications are important. It has Legal for Trade certifications that meet or exceed the Class III accuracy requirements in accordance with the National Institute of Standards and Technology (NIST) Handbook 44 and Measurement Canada Weights and Measures Regulations. The easy to clean and sanitary design of Valor 4000 is Tested and Certified by NSF, USDA-AMS Accepted and supports HACCP Certified systems.

## Knife Proof Keypad Prevents Damage from Sharp Objects

Valor 4000 has a highly durable 0.5 mm (0.02") thick polycarbonate keypad which is impact and puncture resistant. Valor 4000's smooth glossy surfaces easily repel stains, moisture, corrosive fluids and food contaminants, and stainless steel models offer an extra layer of protection.

## The Flow-Thru Design Protects Valor 4000 in Harsh Environments


The flow-thru IPX8, water-resistant design allows for weighing of liquid components and can be used in harsh environments by channeling fluids that may enter the housing to strategically located drain holes, ensuring the scale remains clean and operational. The internal components and connections are silicone sealed to protect the scale from fluids that may enter the scale, and from condensation that may form inside the scale from constant temperature changes in a typical processing environment. The scale can be easily washed off at the end of each shift to keep it in sanitary condition and avoid the growth of bacteria from food contaminants.

## Fast Speed, Practical Touchless Sensors, and Multiple Weighing Modes Enhance Productivity

Don't sacrifice speed or precision for the other – with Valor 4000, you will have both! Valor 4000 not only has a maximum external resolution of 1:6,000/1:7,500, but it displays results in less than half a second. Coupled with a touchless infrared sensor next to the back display which allows a second operator to tare the scale with simply a swipe of the hand, Valor 4000 was created to support speedy use. In addition to standard weighing, Valor 4000 offers checkweighing, accumulation and percent weighing modes.

## Non-Slip Leveling Feet

Large fully rubberized feet are located at extreme corners of the scale to ensure a wide stance and surface resistance that minimizes the risk of the scale sliding or falling off smooth surfaces. The rubber of the feet extends to the shaft that ensures no grooves are exposed when fully extended; a design that passes NSF standards.

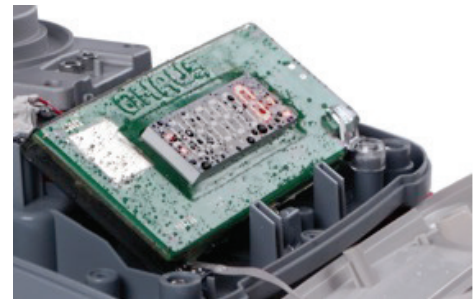

## Power and Portability

The 100-240 VAC universal power adapter can be operated from virtually any power source and can automatically switch to adapt to different power and voltage lines. When plugging your machine in is not an option, the built-in rechargeable lead acid battery will provide power for 50 continuous hours, ensuring uninterrupted operation for more than a full week!

Adapter connection cover underneath the scale is spring loaded to ensure the power receptacle is protected from the ingress of moisture, especially when the scale is washed down.

## Large Dual Displays

With bright front and rear LED displays, more than one operator can utilize the scale for the same job. Even in less than optimal conditions, large, brightly lit screens ensure you can see your results with ease even from a distance.

Dual displays also allow for quick and easy weighing in retail use. The large displays on the front and back of the Valor 4000 allow it to be used in countertop retail applications where the customer needs to see the weight on the platform.

## Certifications

The Valor 4000 is Certified to NSF/ANSI 169 Special Purpose Food Equipment and Devices and is USDA-AMS Accepted to NSF/ANSI /3-A 14159-1 Hygiene Requirements for the Design of Meat and Poultry Processing Equipment.



The Valor 4000 meet or exceed the Class III accuracy requirements in accordance with NIST Handbook 44 and Canada's Weights and Measures Regulations. Certificate of Conformance Number 13-056 was issued under the National Type Evaluation Program (NTEP) of the National Conference on Weights and Measures. Notice of Approval AM-5906C was issued by Measurement Canada, an Agency of Industry Canada.

## Application Modes

- **Weighing** — Determine the weight of items in one or more weighing units -- lb, oz, lb:oz, kg or g -- use the 0.2g to 5g readability for weighing additives, spices and yeast.
- **Percent Weighing** — The Valor 4000 includes % weighing for recipe formulation and baker's percentages. Just weigh the flour on the Valor's platform, capture the reference weight and all other ingredients can be weighed as a % of the flour weight, making small batches of dough quick and easy to work up! Practical use in formulation, ingredients weighing and baker's percentage.
- **Check Weighing** — Use the bright red/yellow/green LED's to easily fill containers and packages by weight -- great for sorting, grading and portioning.
- **Accumulation** — Keep a running total of all items by weight for recording long production run results.



Rear Display with Integrated Touchless Sensor

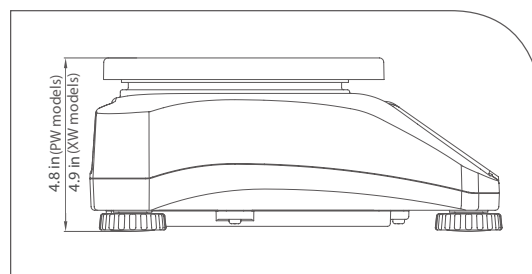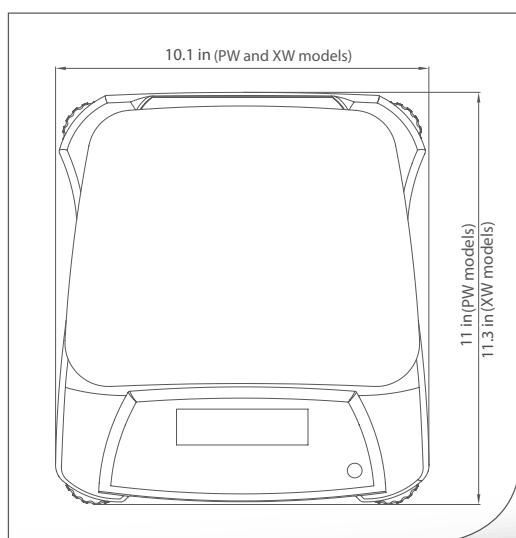

# Valor<sup>®</sup> 4000 Compact Bench Scales

Model	V41PWE1501T V41XWE1501T	V41PWE3T V41XWE3T	V41PWE6T V41XWE6T	V41PWE15T V41XWE15T
Capacity × Readability	1.5 kg x 0.0002 kg 1500 g x 0.2 g 3 lb x 0.0005 lb 48 oz x 0.01 oz 3 lb x 0.01 oz (lb:oz)	3 kg x 0.0005 kg 3000 g x 0.5 g 6 lb x 0.001 lb 96 oz x 0.02 oz 6 lb x 0.02 oz (lb:oz)	6 kg x 0.001 kg 6000 g x 1 g 15 lb x 0.002 lb 240 oz x 0.05 oz 15 lb x 0.05 oz (lb:oz)	15 kg x 0.002 kg 15000 g x 2 g 30 lb x 0.005 lb 480 oz x 0.1 oz 30 lb x 0.1 oz (lb:oz)
Certified Capacity × Readability	1.5 kg x 0.0005 kg 1500 g x 0.5 g 3 lb x 0.001 lb 48 oz x 0.02 oz	3 kg x 0.001 kg 3000 g x 1 g 6 lb x 0.002 lb 96 oz x 0.05 oz	6 kg x 0.002 kg 6000 g x 2 g 15 lb x 0.005 lb 240 oz x 0.1 oz	15 kg x 0.005 kg 15000 g x 5 g 30 lb x 0.01 lb 480 oz x 0.2 oz
Maximum Displayed Resolution (d)	1:7,500	1:6,000	1:6,000	1:7,500
Weighing Units	g, kg, lb, oz, lb:oz			
Application Modes	Weighing, Percent Weighing, Checkweighing, Accumulation			
Keyboard	Four mechanical switches with polycarbonate overlay			
Calibration	Digital external span calibration			
Display	7 segment, 6 digit, 20.5 mm / 0.8 in high red LED dual display			
Display Indicators	Stability, Center of Zero, Net, Battery Status, IR sensor and Accumulation			
Checkweighing Indicators	3 LED (yellow, green, red) with configurable operation			
IR Sensor	Rear side for Tare function			
Tare Range	To capacity by subtraction			
Zero Range	4% - 20% of Capacity			
Stabilization Time	≤0.5 second			
Safe Overload Capacity	150% of capacity			
Operating Temperature Range	-10 °C to 40 °C / 14° F to 104° F, 10% to 90% relative humidity non-condensing			
Construction	V41PW: Stainless steel platform, ABS housing V41XW: Stainless steel top housing and platform, ABS bottom housing			
Power	12V DC 0.84A, AC Universal adapter (100 - 220V AC / 50 -60Hz) and built-in internal rechargeable lead acid battery included			
Battery Operation	Typically 50 hours of continuous use with 12-hour full charge			
Ingress Protection	IPX8 Washdown			
Platform Size	190 x 242 mm / 7.5 x 9.5 in			
Scale Dimensions (W x D x H)	V41PW: 256 x 280 x 121 mm / 10.1 x 11 x 4.8 in V41XW: 256 x 288 x 124 mm / 10.1 x 11.3 x 4.9 in			
Shipping Dimensions (W x D x H)	410 x 370 x 220mm / 16.1 x 14.6 x 8.7 in			
Net Weight	V41PW: 3.0 kg / 6.6 lb V41XW: 3.9 kg / 8.6 lb			
Shipping Weight	V41PW: 4.0 kg / 8.8 lb V41XW: 4.9 kg / 10.8 lb			

## Other Standard Features and Equipment

Adjustable feet, level bubble with lighting, menu and mode setup navigation prompts on keys, easy transportation carrying handle, stainless steel pan and chemical-resistant overlay, new mechanical keys, a cover with spring to protect power connector of scale

## Approvals

- **Metrology:** NIST Handbook 44 (NTEP CC 13-056), Canada Weights and Measures Regulations (AM-5906C) – Class III, nmax 3000
- **Product Safety:** IEC 61010-1:2010; CAN/CSA-C22.2 No. 61010-1-12; UL Std. No. 61010-1 (3rd Edition)
- **Electromagnetic Compatibility:** FCC Part 15; Industry Canada ICES-003 – Class B
- **Ingress Protection:** IEC 60529 Edition 2.1 – IPX8
- **Food Safety:** NSF/ANSI 169-2009; NSF/ANSI /3-A 14159-1-2010
- **Other:** WEEE/RoHS

## OHAUS CORPORATION

\* 7 Campus Drive  
Suite 310  
Parsippany, NJ 07054 USA

Tel: 800.672.7722  
973.377.9000  
Fax: 973.944.7177

[www.ohaus.com](http://www.ohaus.com)

With offices throughout  
Europe, Asia, and  
Latin America

\*ISO 9001:2008  
Registered Quality  
Management System

80774686 © Copyright Ohaus Corporation

